



# quick start guide

## Change your network name & password

For Arris DG 2470/3270 modems

1. Open your favourite web browser on your computer, tablet, or smartphone (Safari, Chrome, Internet Explorer, etc.)
2. In the address bar, type: 192.168.0.1 and press enter
3. When asked for a username and password, use the information below then click 'Login':
  - Username: admin
  - Password: password
  - [If this login information doesn't work, please call us at 902-800-7912](tel:902-800-7912)
4. Change the network name (SSID) for both the WiFi 2.4 GHz and the WiFi 5.0 GHz sections to a name of your choice! We suggest adding 2.4 and 5.0 to your network names so you can easily remember which is which.
5. Change the pre-shared key to the password of your choice for both the WiFi 2.4 GHz and the WiFi 5.0 GHz networks.
6. Click Apply to save your new network names and passwords.
7. Log into your new WiFi network with your computer/smartphone/tablet using the network name and passwords you just created (be sure to check that you have WiFi enabled on your devices!)

Your networks will be visible to all WiFi devices within the range of your modem.